


			NOTES	
1. Provid	e with t	emperature display	and communications port.	
		BILI	_ OF MATERIAL	
DESIG	QTY	MODEL NO.	DESCRIPTION	
TS 1	1		Temp Sensor, Zone	
TS 2	1		Temp Sensor, Duct	
D1	1		Damper Actuator	
OCC	1		Occupancy Sensor	

CONTROL SCHEMATIC

OCCUPANCY OVERRIDE AND SETPOINT CONTROL

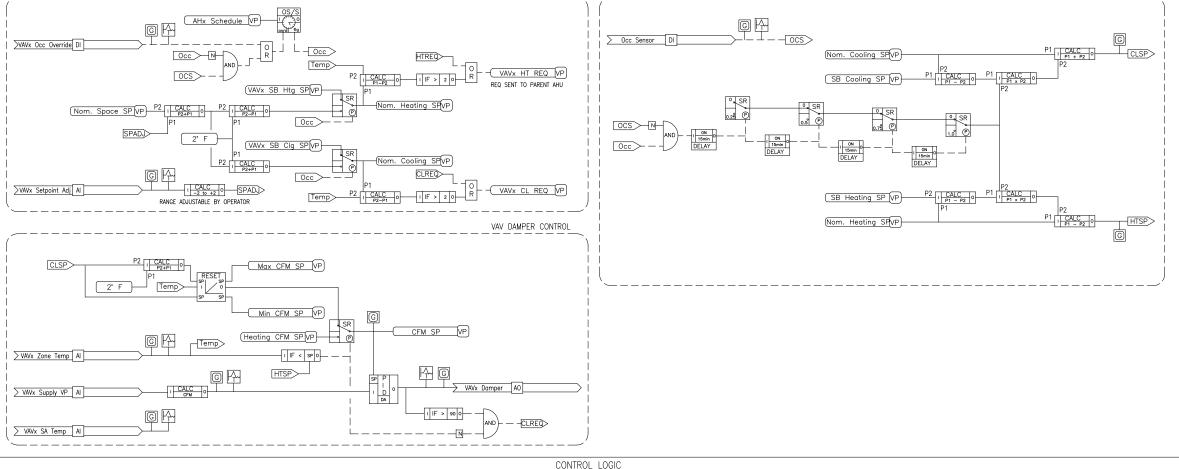

SEQUENCE OF OPERATION

<u>General</u>: The variable air volume terminal shall be fully controlled by the BAS. Control shall be pressure independent with minimum and moximum flow setpoints, scheduled occupancy with optiminum preoccupancy and occupancy override. Default schedule shall be the same

Space Temperature Control: During periods of occupied operation (space is occupied, scheduled to be occupied or occupancy is detected) the operator may adjust the Normal (72F adj.) setpoint. Occupants may further adjust the Normal setpoint via the local sense setpoint adjustment (the range of adjustment shall be configurable via the BAS, initially +/-2F). The BAS shall automatically apply an offset for cooling and heating set points during occupied periods as follows:

1. Space cooling setpoint shall be the Normal space temperature setpoint plus 2F (adj.).

2. Space heating setpoint shall be the Normal space temperature setpoint minus 2F (adj.).

M CITY I'C.

STANDARD

ONTROLS

of VIRGI

During periods of unoccupied operation (space is scheduled unoccupied or no occupancy is detected for a preset period) the operator may adjust Setback heating (50°F adj.), and Setback cooling (85°F adj.) setpoints. The BAS will prevent the operator from entering a Setback heating setpoint higher than the Space heating setpoint OR entering a Setback cooling setpoint lower than the Space cooling setpoint.

Occupancy Override: Occupancy override shall be initiated at the local zone sensor or via the occupancy sensor. Unit shall change to the occupand whenever the override button is depressed (or signal is received from the occupancy sensor) for a period of 2 hours (adj.) and reset to normal operation at the end of the period or whenever the override button is held for more than 5 seconds (adj.).

Occupancy Sensor:

OCCUPANCY SENSOR SET POINT CONTROL

GENERAL: Occupancy sensors shall be dual-technology (PIR / Ultrasonic) ceiling and/or wall mounted based on space size, configuration and use. Multiple sensors shall be networked to provide full coverage of any controlled space with 20% overlap. An isolated relay contact shall be provided for each controlled space designated for BAS monitoring.

OCCUPIED MODE SENSING: Once scheduled occupancy is established the BAS shall monitor the occupancy sensor contact and adjust the space temperature set point as follows:

- Sensor detects occupancy during occupied period:
 BAS shall maintain normal occupancy set points.
- B) Sensor indicates no occupancy during occupied period:

 1) Every continuous 15 minute (adj.) period after non-occupancy the normal space set points shall be reset 25% (adj.) toward their unoccupied set point. (i.e. 72F normal cooling, 80F setback cooling; after first 15 minutes set point adjusts to 74F)

 2) When occupancy is detected during occupied period set points shall reset to normal occupied schedule.
- Sensor detects occupancy during unoccupied period:
 BAS shall initiate an occupancy override and reset to normal occupancy set points.

Zone Damper: Zone damper shall modulate in a PI loop to maintain zone volume setpoint. Zone volume setpoint shall be reset between maximum and minimum volume settings to maintain space temperature cooling setpoint with a 2°F (adj) reset range. Zone volume setpoint shall be set to the heating volume setpoint whenever the space temperature falls below the heating space temperature setpoint.

1. Cooling minimum volume setpoint shall be 30% of design maximum flow when not

specifically scheduled on the drawings. In the unoccupied period the minimum volume setpoint shall be 0 cfm.

setpoint shall be 0 cfm.

2. Cooling maximum volume setpoint shall be as scheduled on the drawings during the occupied period and shall be set to zero otherwise.

3. Heating minimum volume setpoint: Whenever heating is requested from the box any period, the minimum volume shall be set to an adjustable heating setpoint airflow. Initially, this setpoint shall be 30% of design maximum flow.

Cooling Request: This terminal shall issue a "COOLING REQUEST" to the parent AHU as follows:

1. Whenever the zone damper output is controlling for a cooling setpoint and the calculated signal is greater than 90% (adj.), OR

2. Whenever the space temperature rises above the throttling range of the cooling loop.

Alarms: The BAS shall generate an alarm under the following conditions: 1. Whenever the measured flow is more than +/-30% (adj.) continuously for 15 min. (adj.),

UK 2. Whenever the zone temperature is more than $2^{r}F$ (adj.) below the cooling setpoint continuously for 30 min. (adj.) AND the measured flow is more than 50% (adj.) higher than the active flow setpoint.

continuously for 30 min. the active flow setpoint.	(adj.) AND the measured floo	wis	more	than	50%	(adj.) higher than	UNIVERSITY FACILITIES 1	CONTRO
	POINTS LI	ST					5	_
	POINT	POINT TYPE			E		1	HVAC
POINT NAME	DESCRIPTOR	DI	Al	DO	A0	REMARKS		∠
VAVxx.SA-F	VAVx SA Flow		1					\geq
VAVxx.PRIM-D-C	VAVx Primary Dmper				1]	\equiv
VAVxx.OCC-OVRD	VAVx Occ Override	1						
VAVxx.SA-T	VAVx SA Temperature		1					
VAVxx.OCC-OVRD-S	VAVx Occ Sensor	1						
VAVxx.ZN-xx-T-SP	VAVx Zone x SP Adj		1				Eng	HJN
VAVxx.ZN-xx-T	VAVx Zone x Temp		1				Drawn	HJN
		_		_			Chkd	
		L.	<u> </u>	<u> </u>	<u> </u>		Appd	
TOTALS 2 4 0 1						Issued	8/4/11	
							Job No.	10080
							Scale	N/A
							Proi Code	

	STANDARD			
BINARY	ANALOG	DESCRIPTION	#	
Occ		ON WHEN UNIT IS INDEXED TO OCCUPIED MODE	5	
ocs>		ON WHEN OCCUPANCY SENSOR INDICATES OCCUPANCY	3	
CLREQ		ON WHEN DAMPER REQUESTS COOL	2	
	Temp	VARIABLE VALUE OF CURRENT ZONE TEMPERATURE	4	SINGLE DUCT
	HTSP	VARIABLE VALUE OF ACTIVE HEATING SETPOINT	2	VAV COOLING
	CLSP	VARIABLE VALUE OF ACTIVE COOLING SETPOINT	/E COOLING SETPOINT 2	
	SPADJ>	VARIABLE VALUE OF CURRENT SETPOINT ADJUSTMENT	2	

11 OF 30 SHEET NUMBER

C - 2.0

DWG NUMBER